



PIN NOTICE BOARD

Installation guide

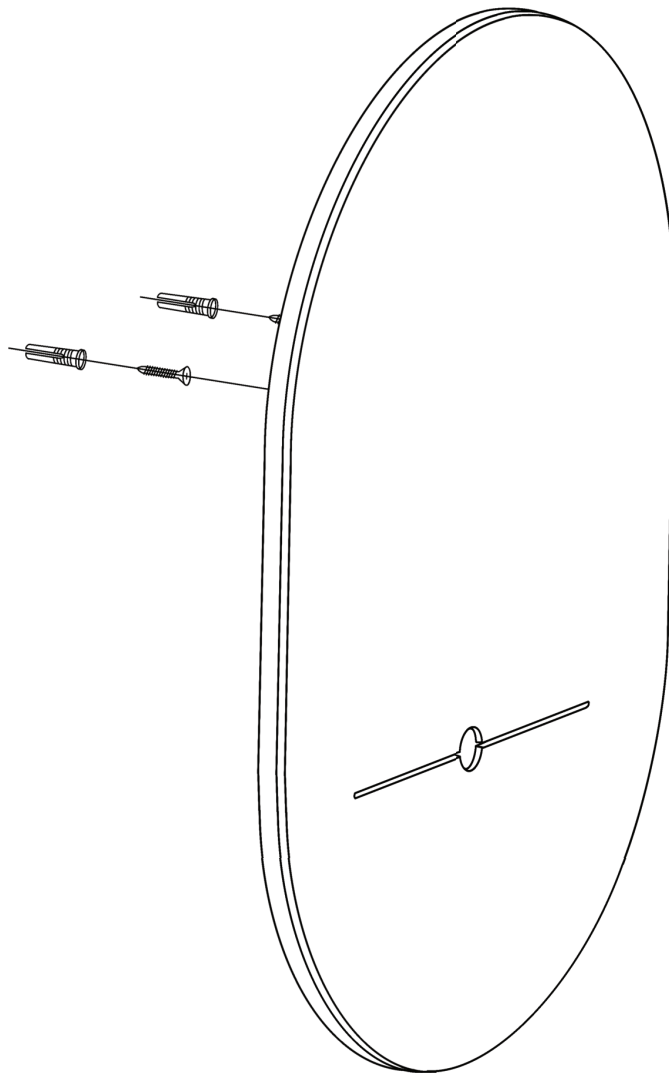


font.

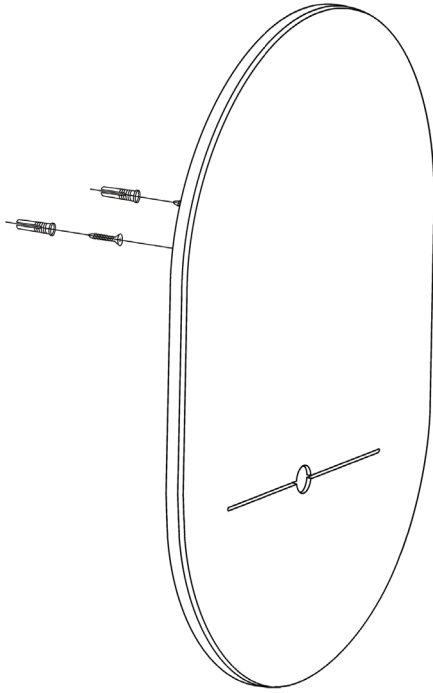

When installing your PIN notice board, it's essential to ensure that it is securely and accurately fixed. The most effective installation method varies depending on the type of wall you're working with. Each board requires two wall plugs, and it's crucial to choose plugs that are appropriate for your wall material. If you're uncertain, seek guidance at your local hardware store. They can help you select the correct wall plug and screw.


Follow these steps:

1. Choose 2 screws (countersunk heads) & dowels that match the type of wall.
2. Mark the locations of the holes on the wall, pay attention to the water level. Drill them out, screw in the screw (not all the way.)
3. Hang the board through the keyholes on the back.




Concrete wall.

When mounting to concrete walls, a wall plug is necessary. Keep in mind that concrete walls, particularly in newer buildings, can be thin, so a specialized plug may be needed.




Brick wall.

When mounting onto a brick wall, it's important to use a wall plug. Ensure that you drill into the bricks themselves, rather than the mortar surrounding them.



Wooden wall.

When attaching your product to a wooden surface, specific wood screws are necessary.



Drywall.

Drywall is composed of a porous material, so it's crucial to use a wall plug specifically designed for drywall when mounting.